

Accessories

Create your perfect Platform

Which accessories do you require?



Classic Leisure Pack

The classic leisure pack is ideally suited to the smaller yacht limited on storage space.

The classic comfort seats stow flat at 145cm x 48cm x 8cm / 4'9" x 1'7" x 3".

Each pack comprises two portable classic comfort seats, two fastening belts & two luxury headrests.



Luxury Leisure Pack

The ultimate in comfort, the luxury comfort seats are longer, wider & thicker measuring 195cm x 58cm x 10cm/ 6'5" x 1'11" x 4" when stowed flat.

Each pack comprises two portable luxury comfort seats, two fastening belts & two luxury headrests.



Transom Bumpers

To avoid Platforms drifting under the stern. Transom Bumpers can be effortlessly fastened to the surface of the platform (20cm/7.5" in height) adding another 35cm (1') in height.

These are suitable for Transoms up to 0.45m (1'6").



Boarding Ladder

Made from 316 marine grade stainless, this user friendly 4-step boarding ladder makes it safe & simple to get back on to the platform.



Maintenance Pack

Designed to convert the Teak platforms from a guest leisure platform to a fully equipped crew maintenance raft.

Available in 4 different sizes, each pack comes with a protective non-skid maintenance cover, two Velcro bottomed 37 litre collapsible buckets & four hose holders.


For those messier paint jobs the Diamond Platforms can also be converted with the use of the cover.



Maintenance Add-on

Without the use of the cover, the Diamond Maintenance add-on quickly converts any Diamond Platform into a light work raft.

Each pack comes with two Velcro bottomed 37 litre collapsible buckets, four hose holders, two Suction cups with cleats and two 8m (26') 14mm (0.5") eye spliced polyester dock lines.

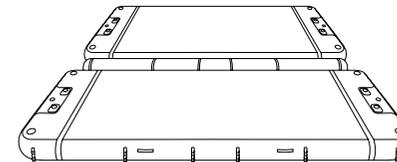

Side Joining Air Toggles

When linking side-by-side use one Air Toggle only for an entrapment free connection. These can be purchased separately for the entire length of your Platform size.

When choosing which Air Toggle is required for side-by-side connection, the length of the shortest Platform in the configuration is the length of Air Toggle which must be used for that connection.